



Programming Phone Lock Key & Lock/Unlock Phone Instructions


1. Press the blue **Menu** button.

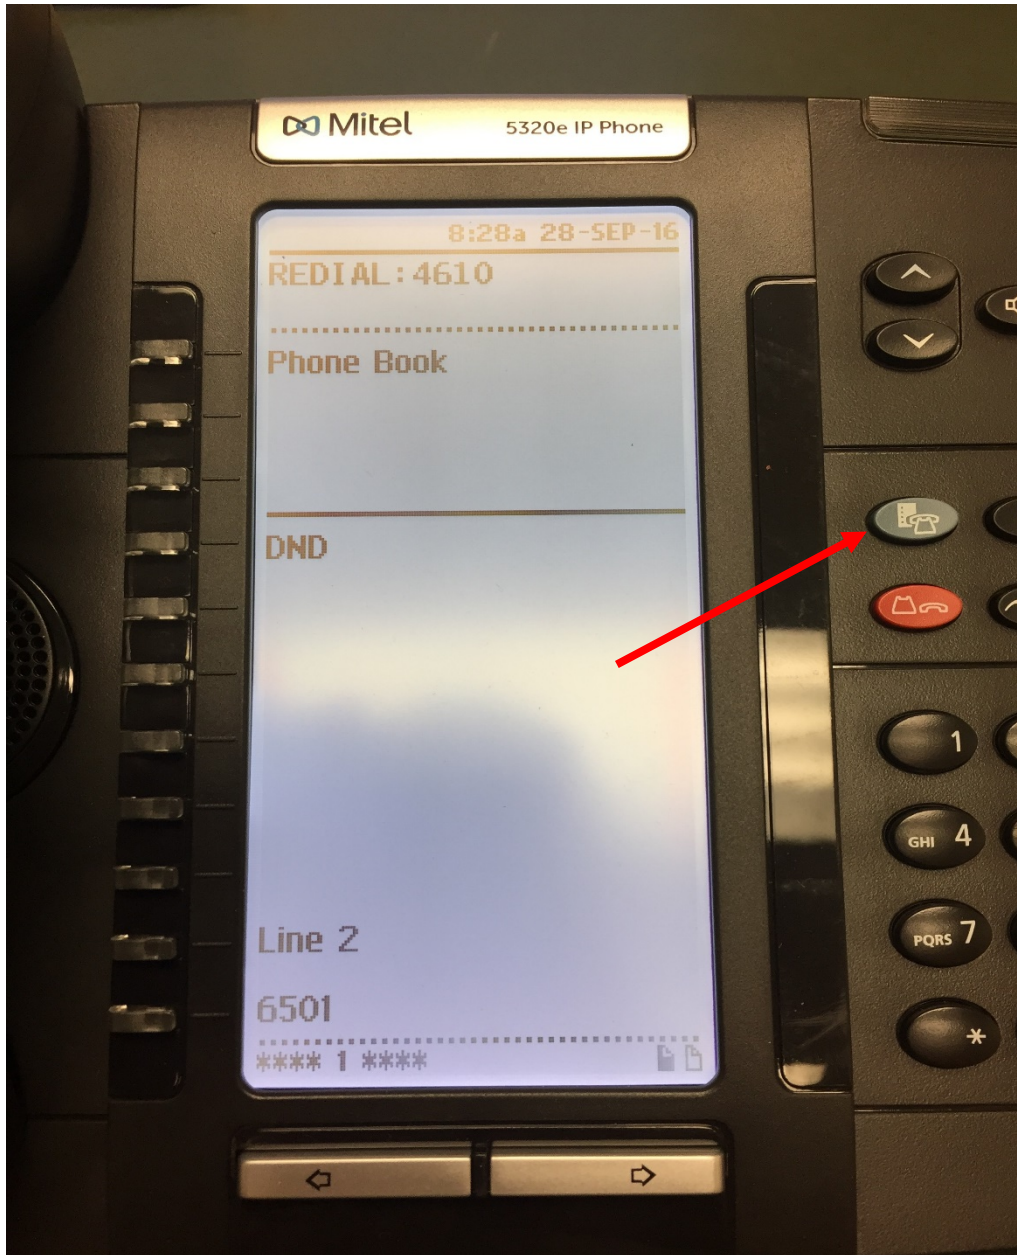


2. Select **Settings**.

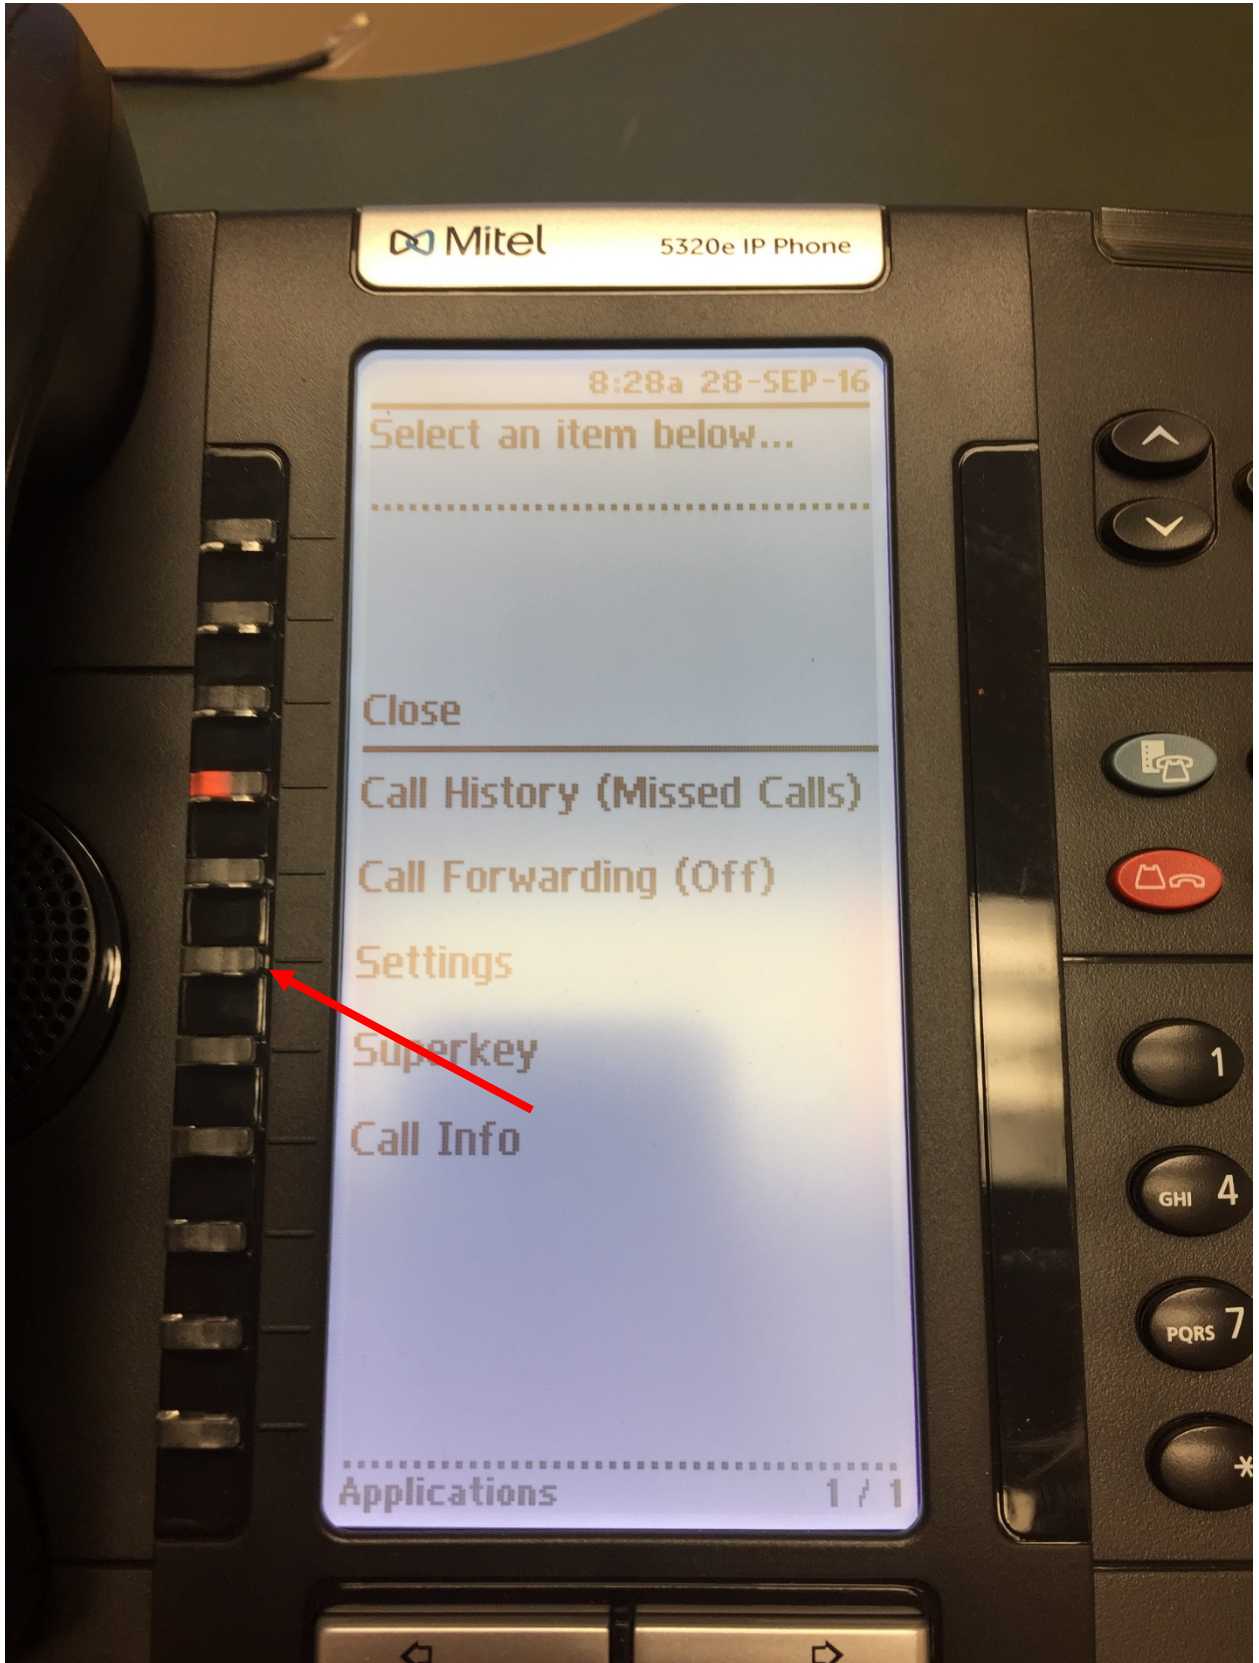


3. Select **Programmable Keys**.

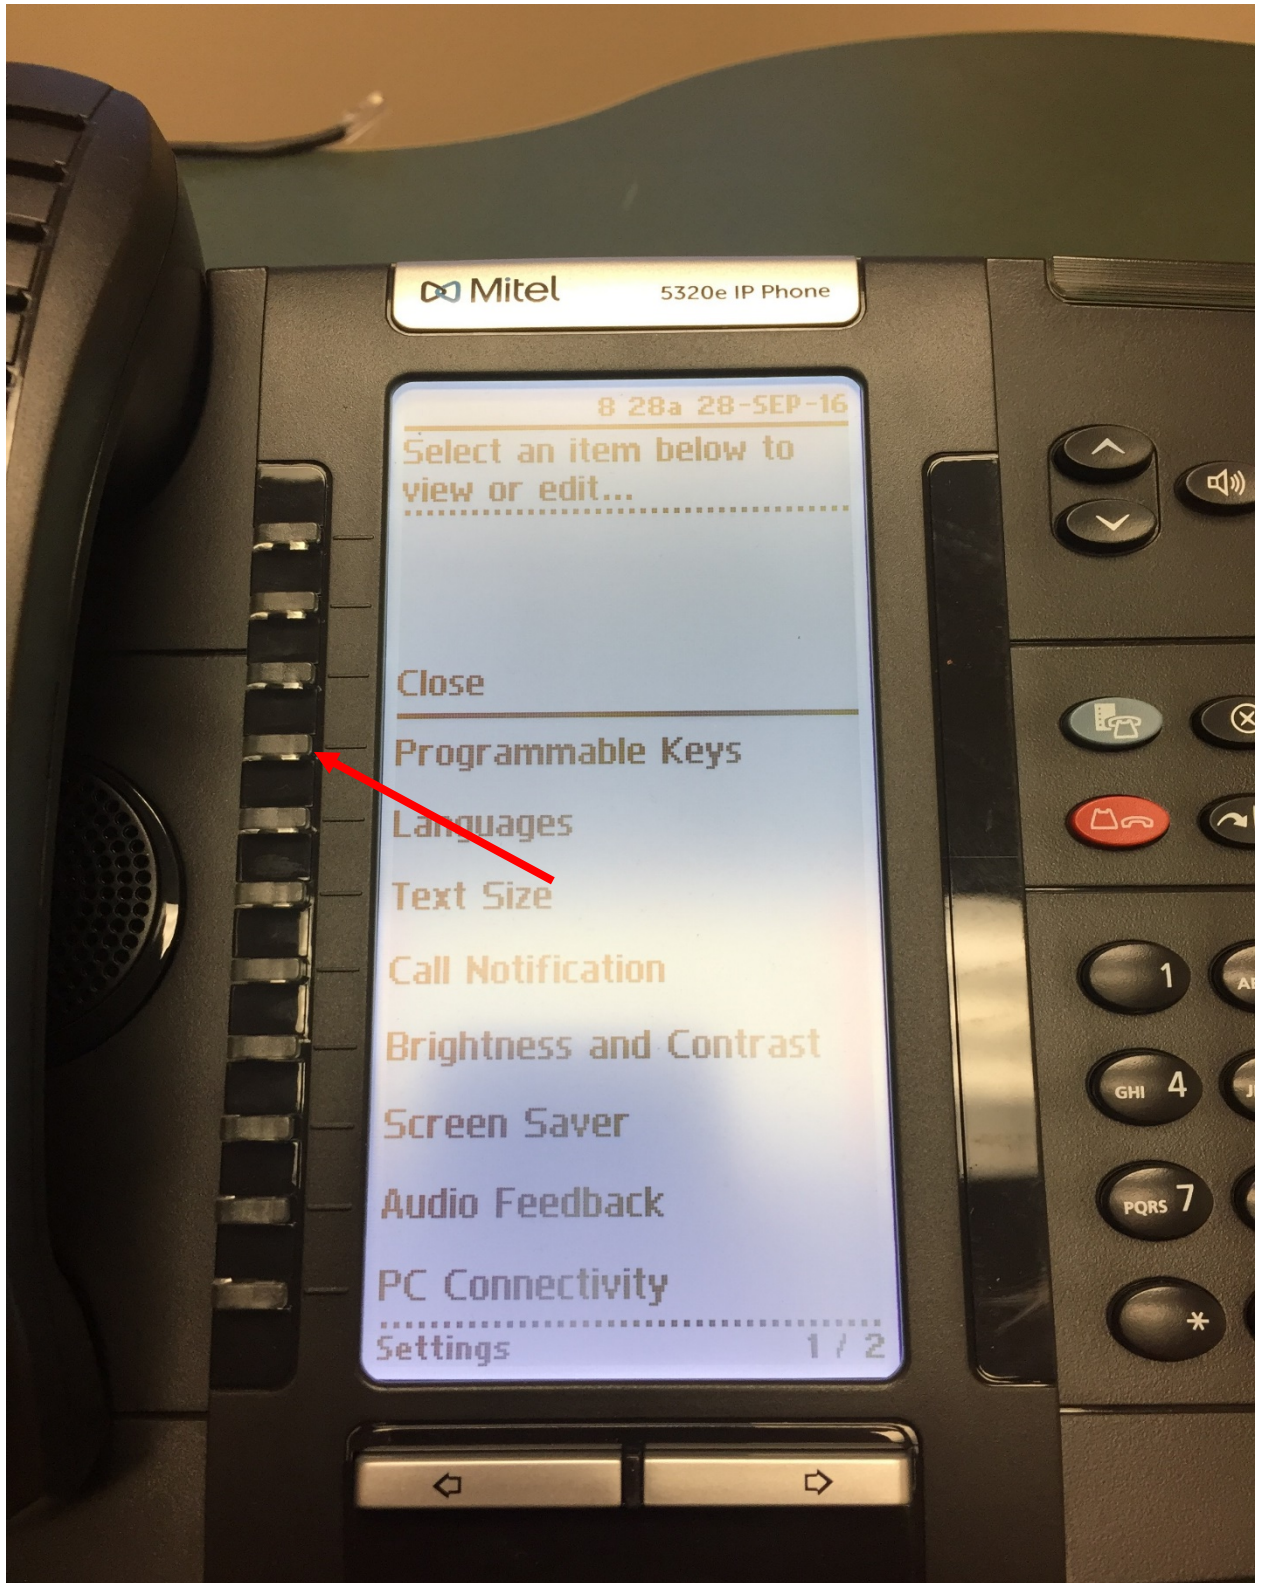


4. Select the key you wish to program. (You can choose any "blank" key not already programmed)

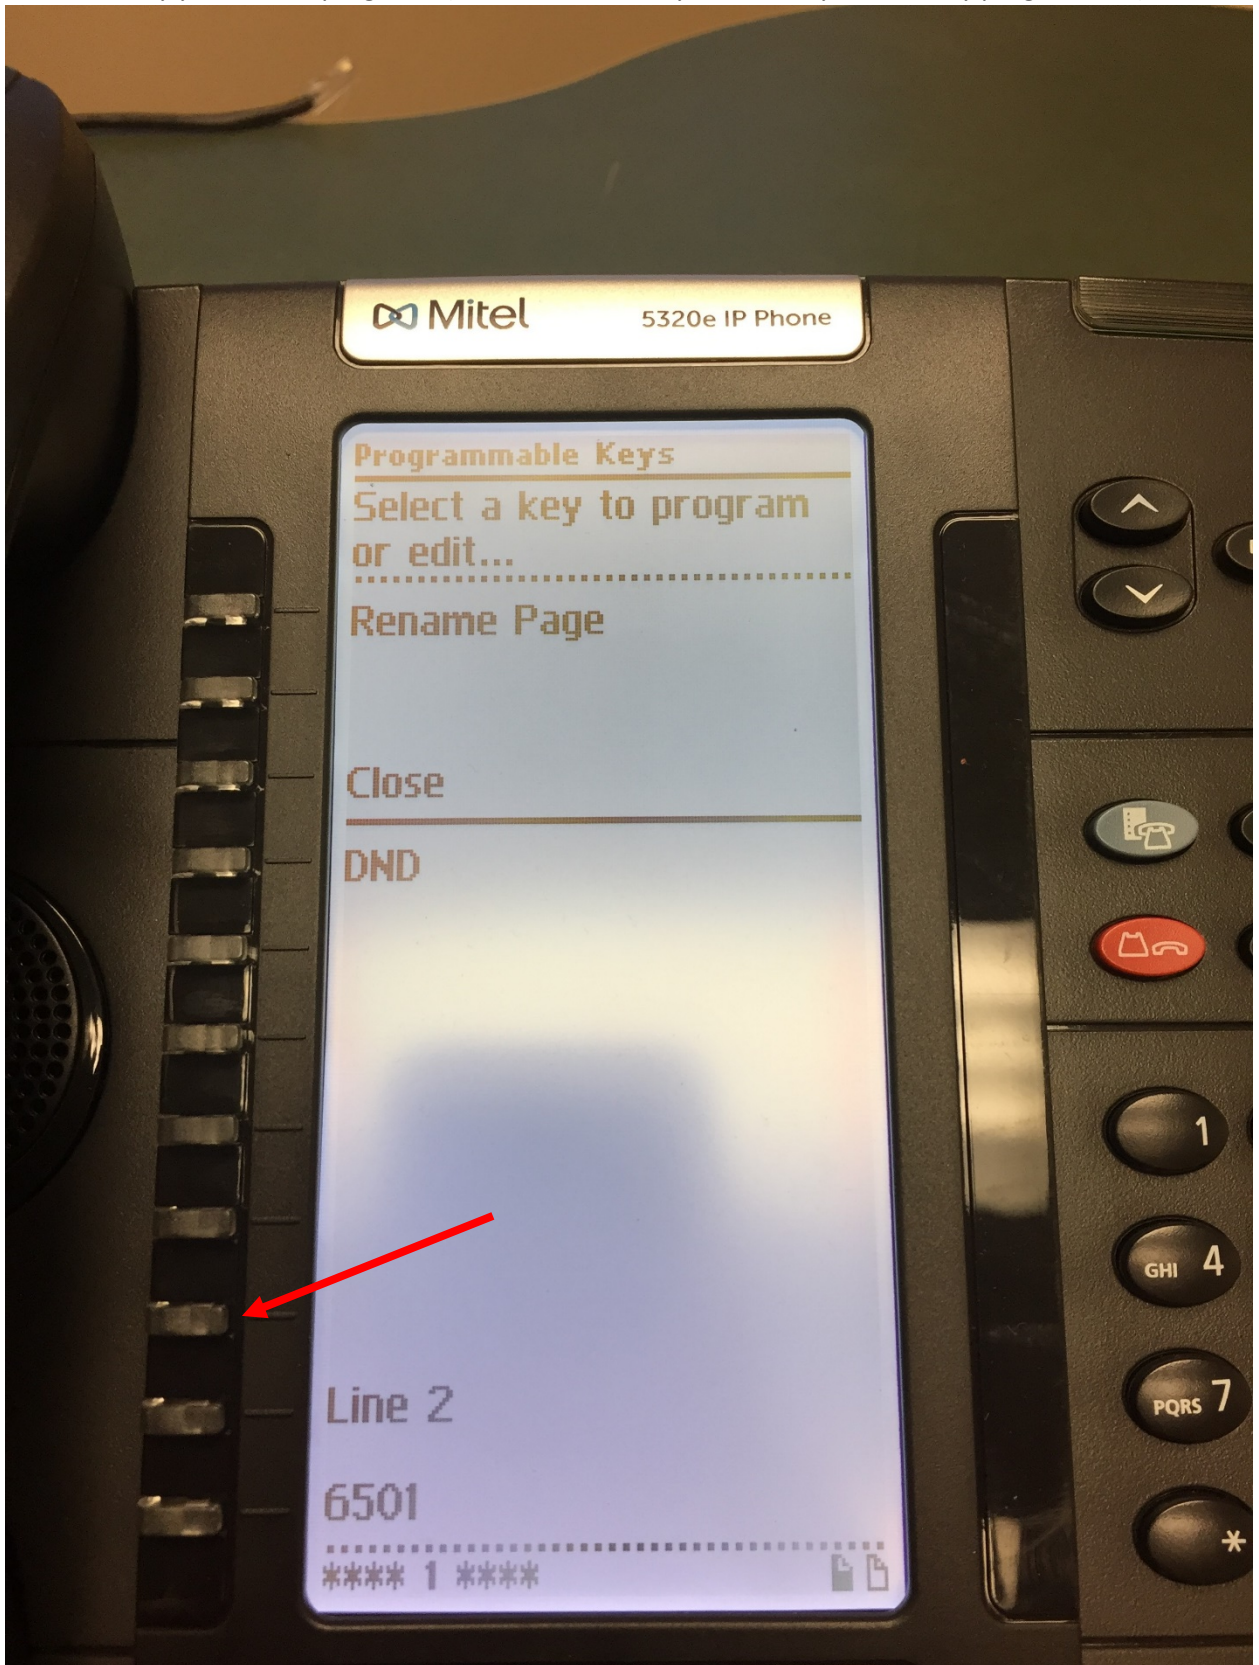


5. Use the arrow keys to select page 6/6.

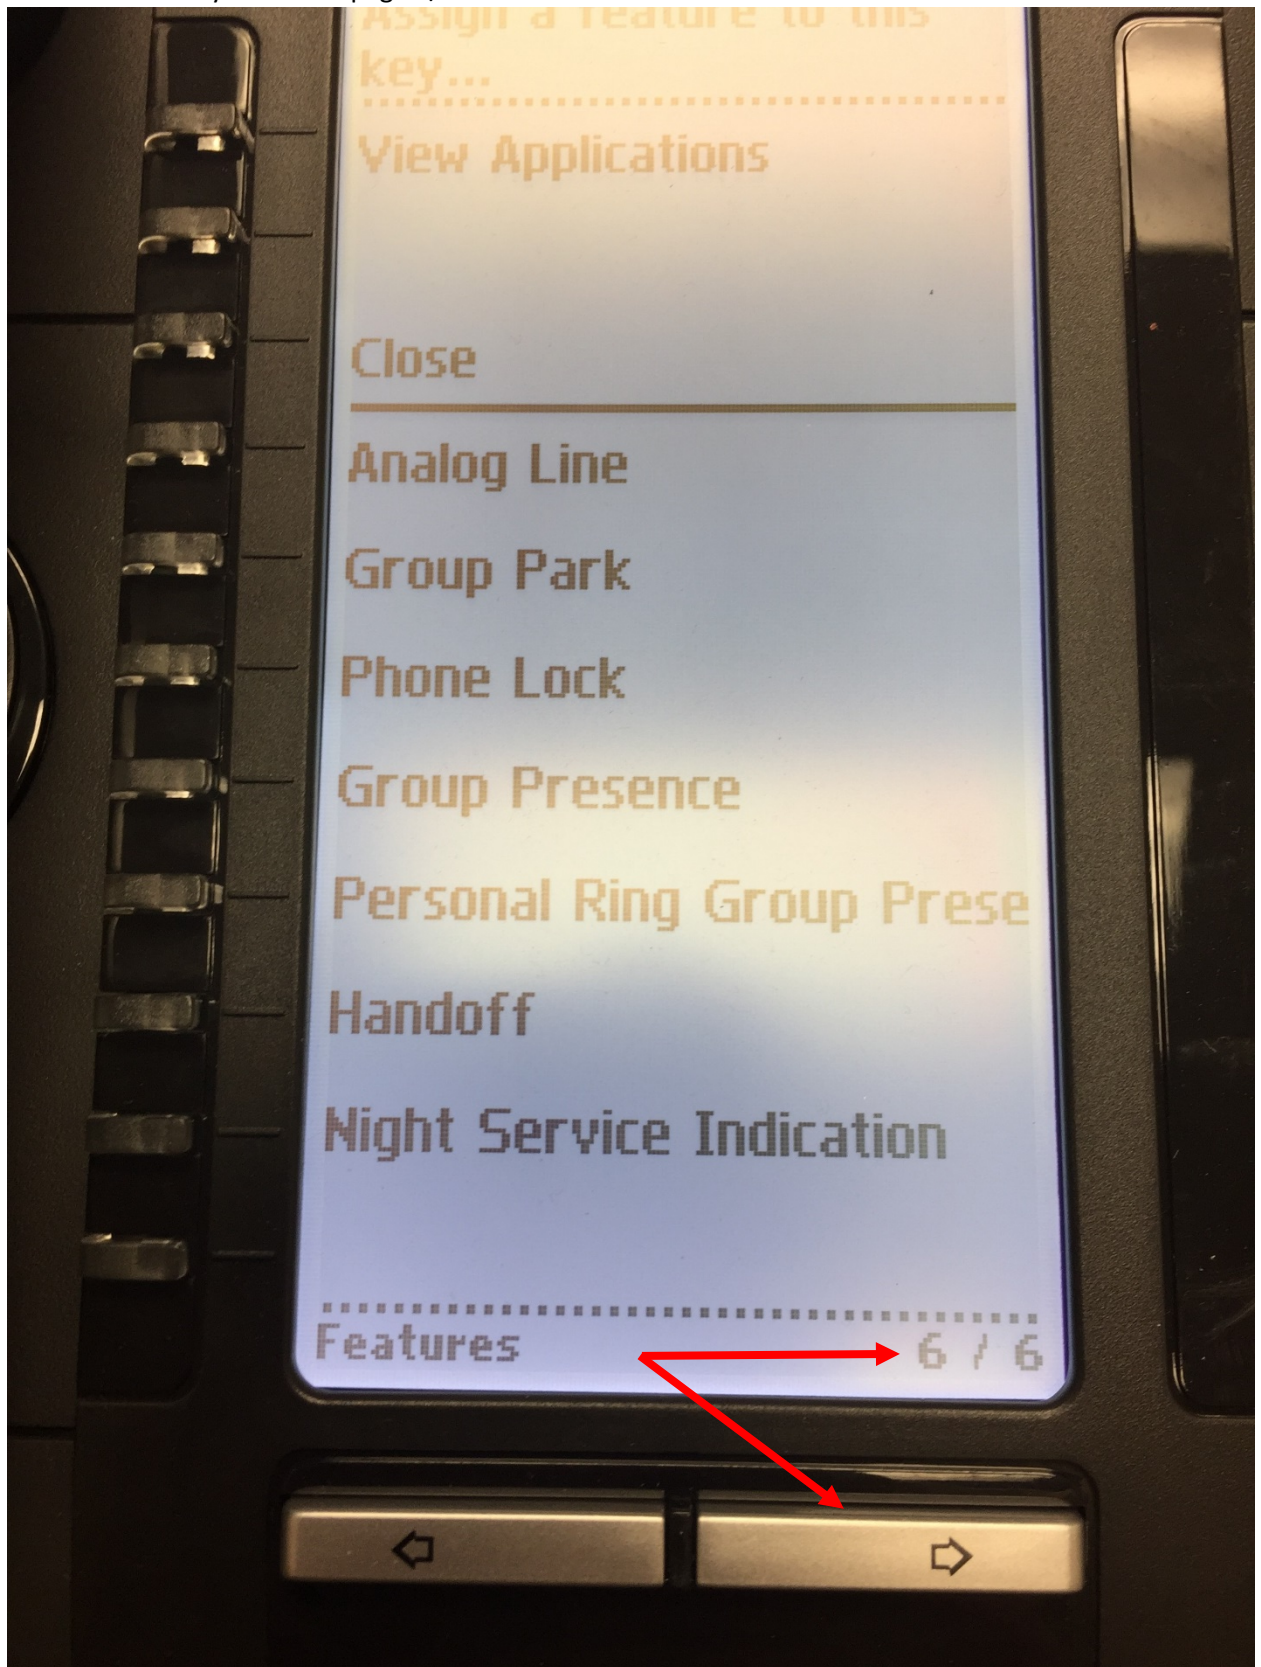


6. Select **Phone Lock**.

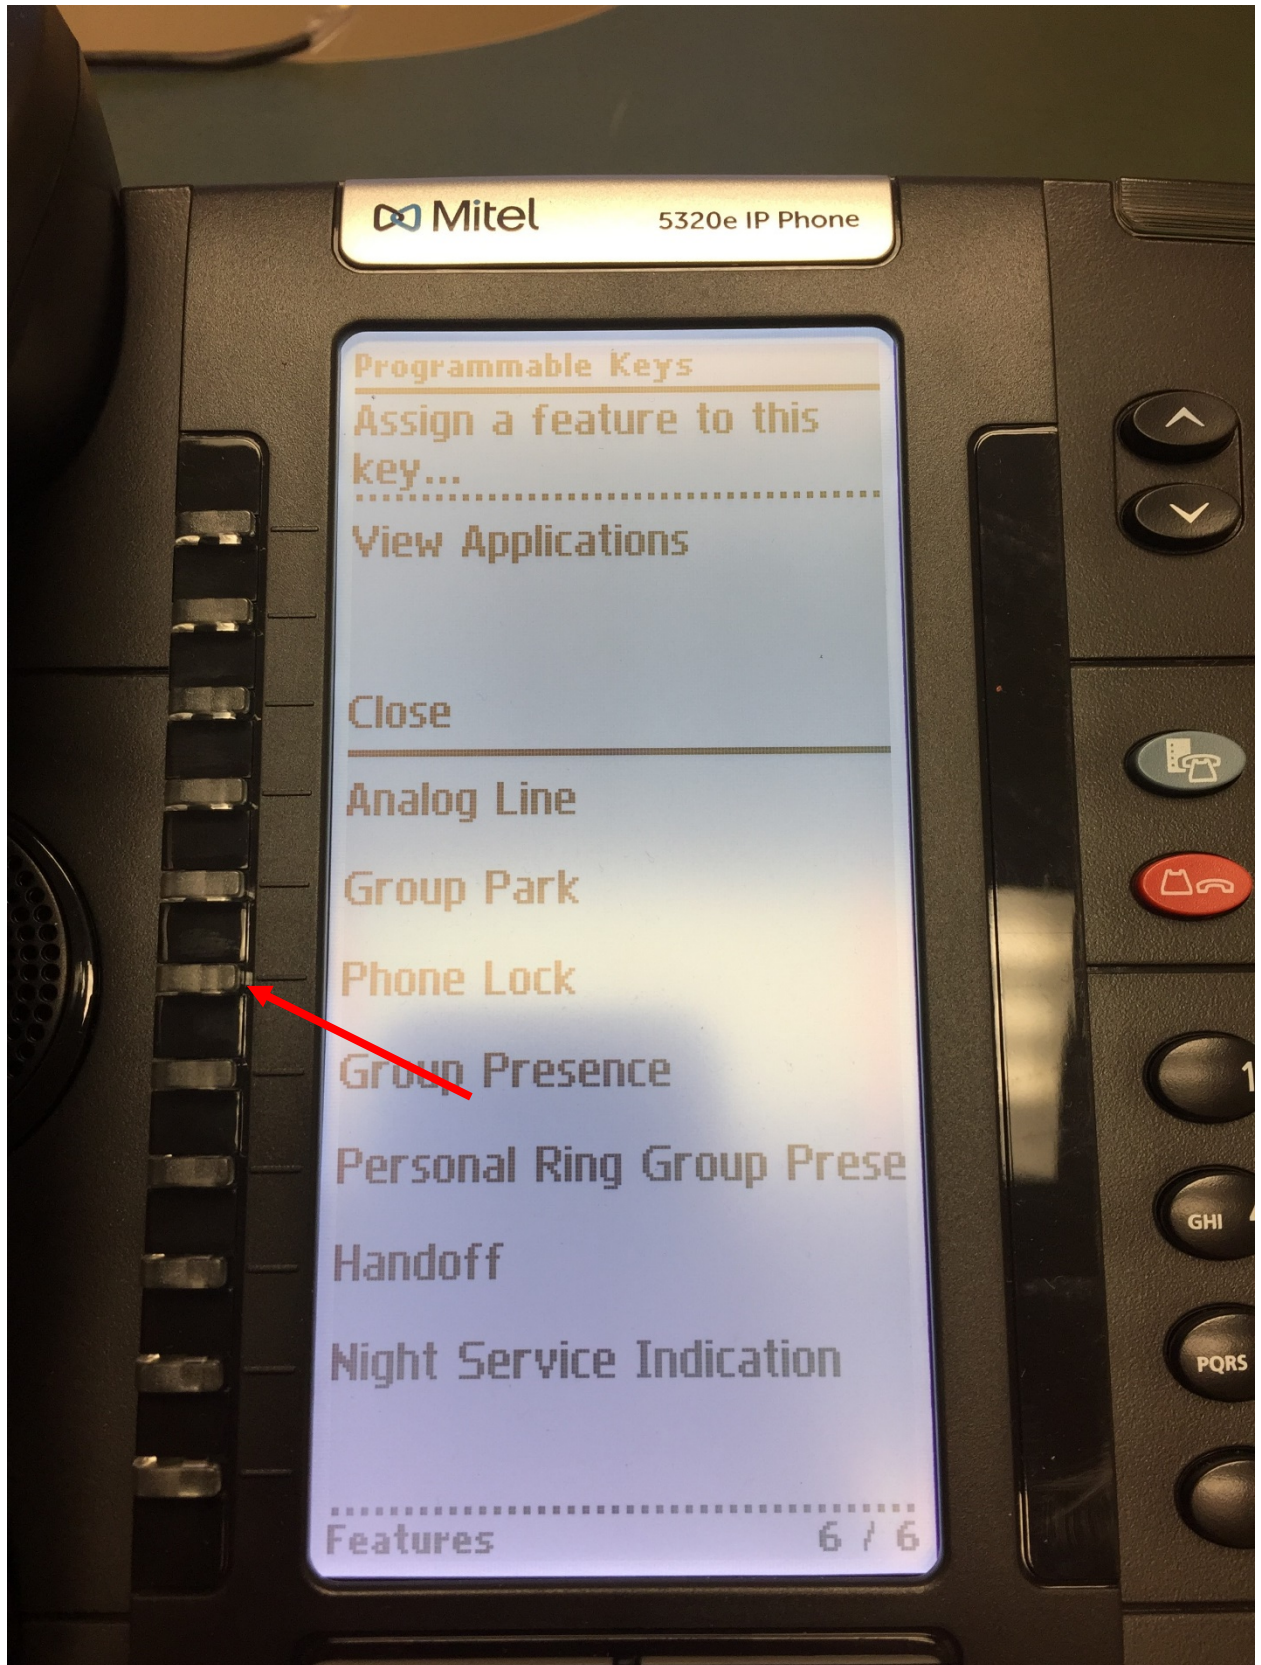


7. Select **Save**.

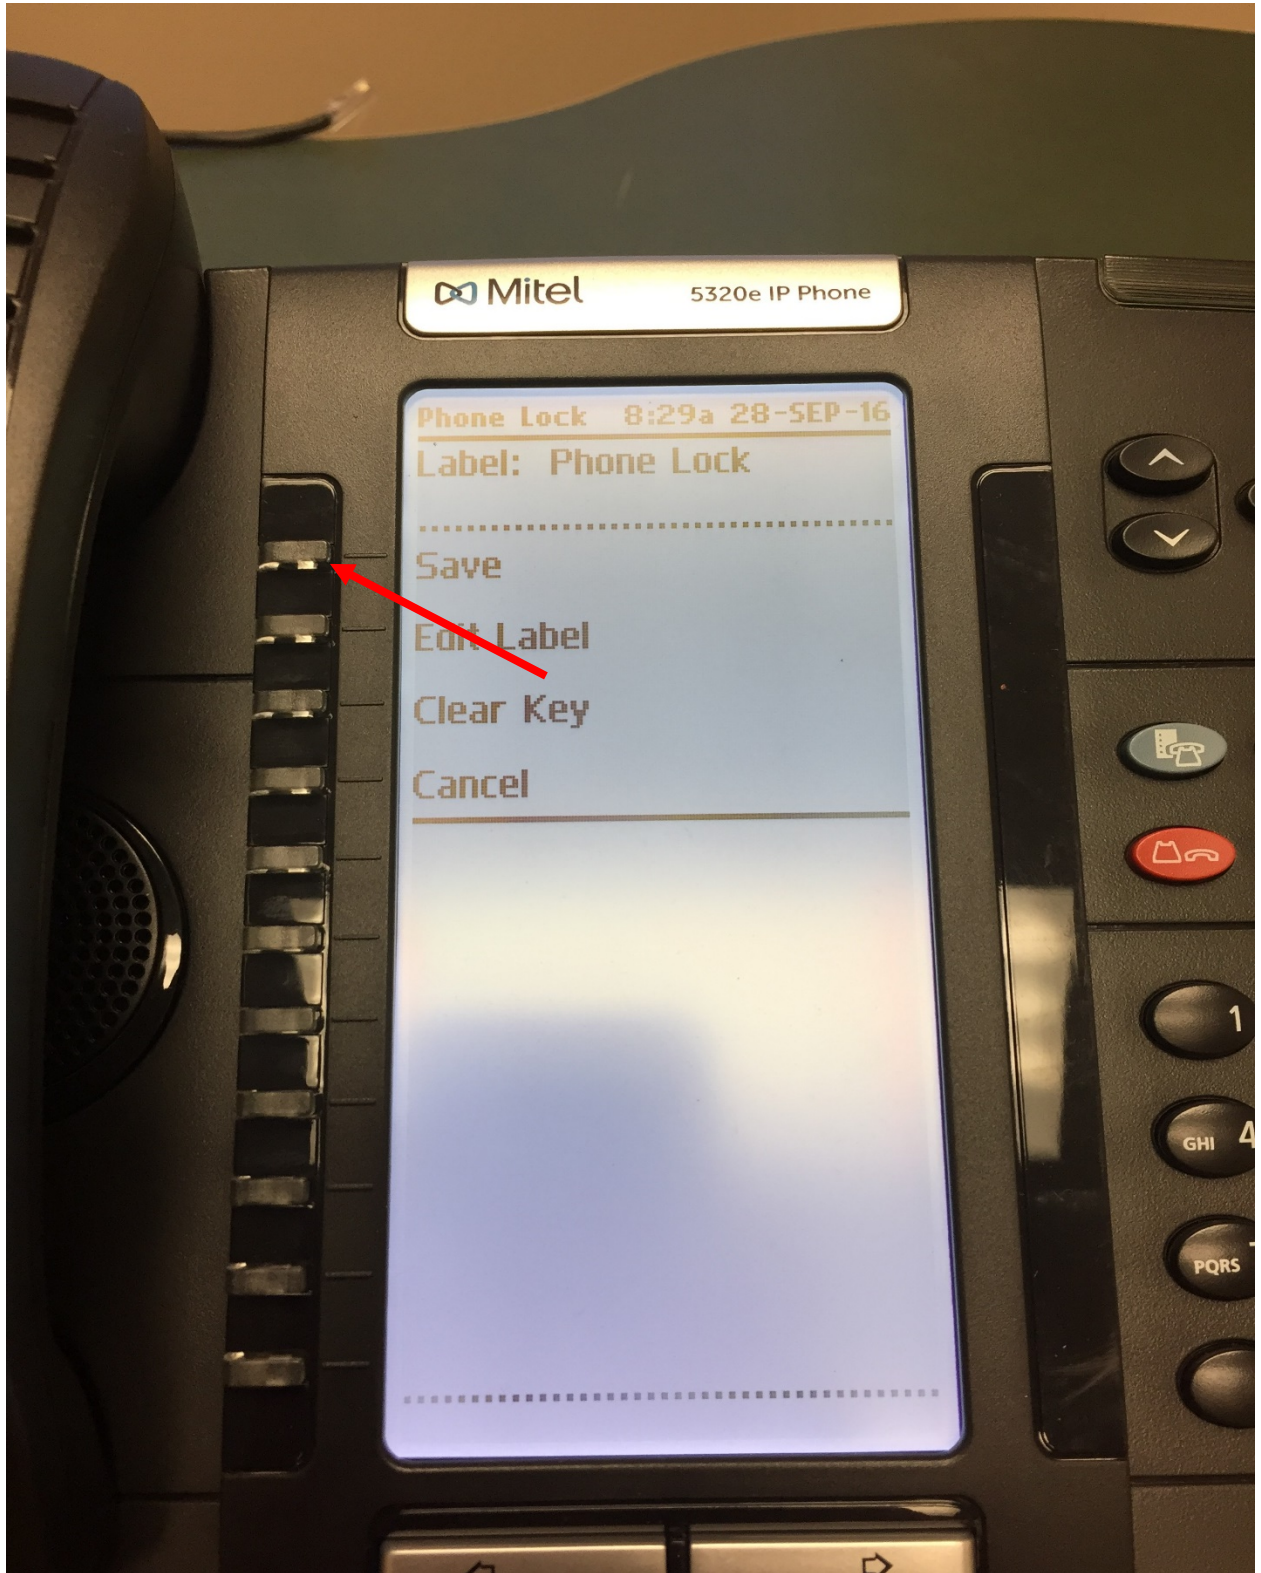


8. Select **Close**.

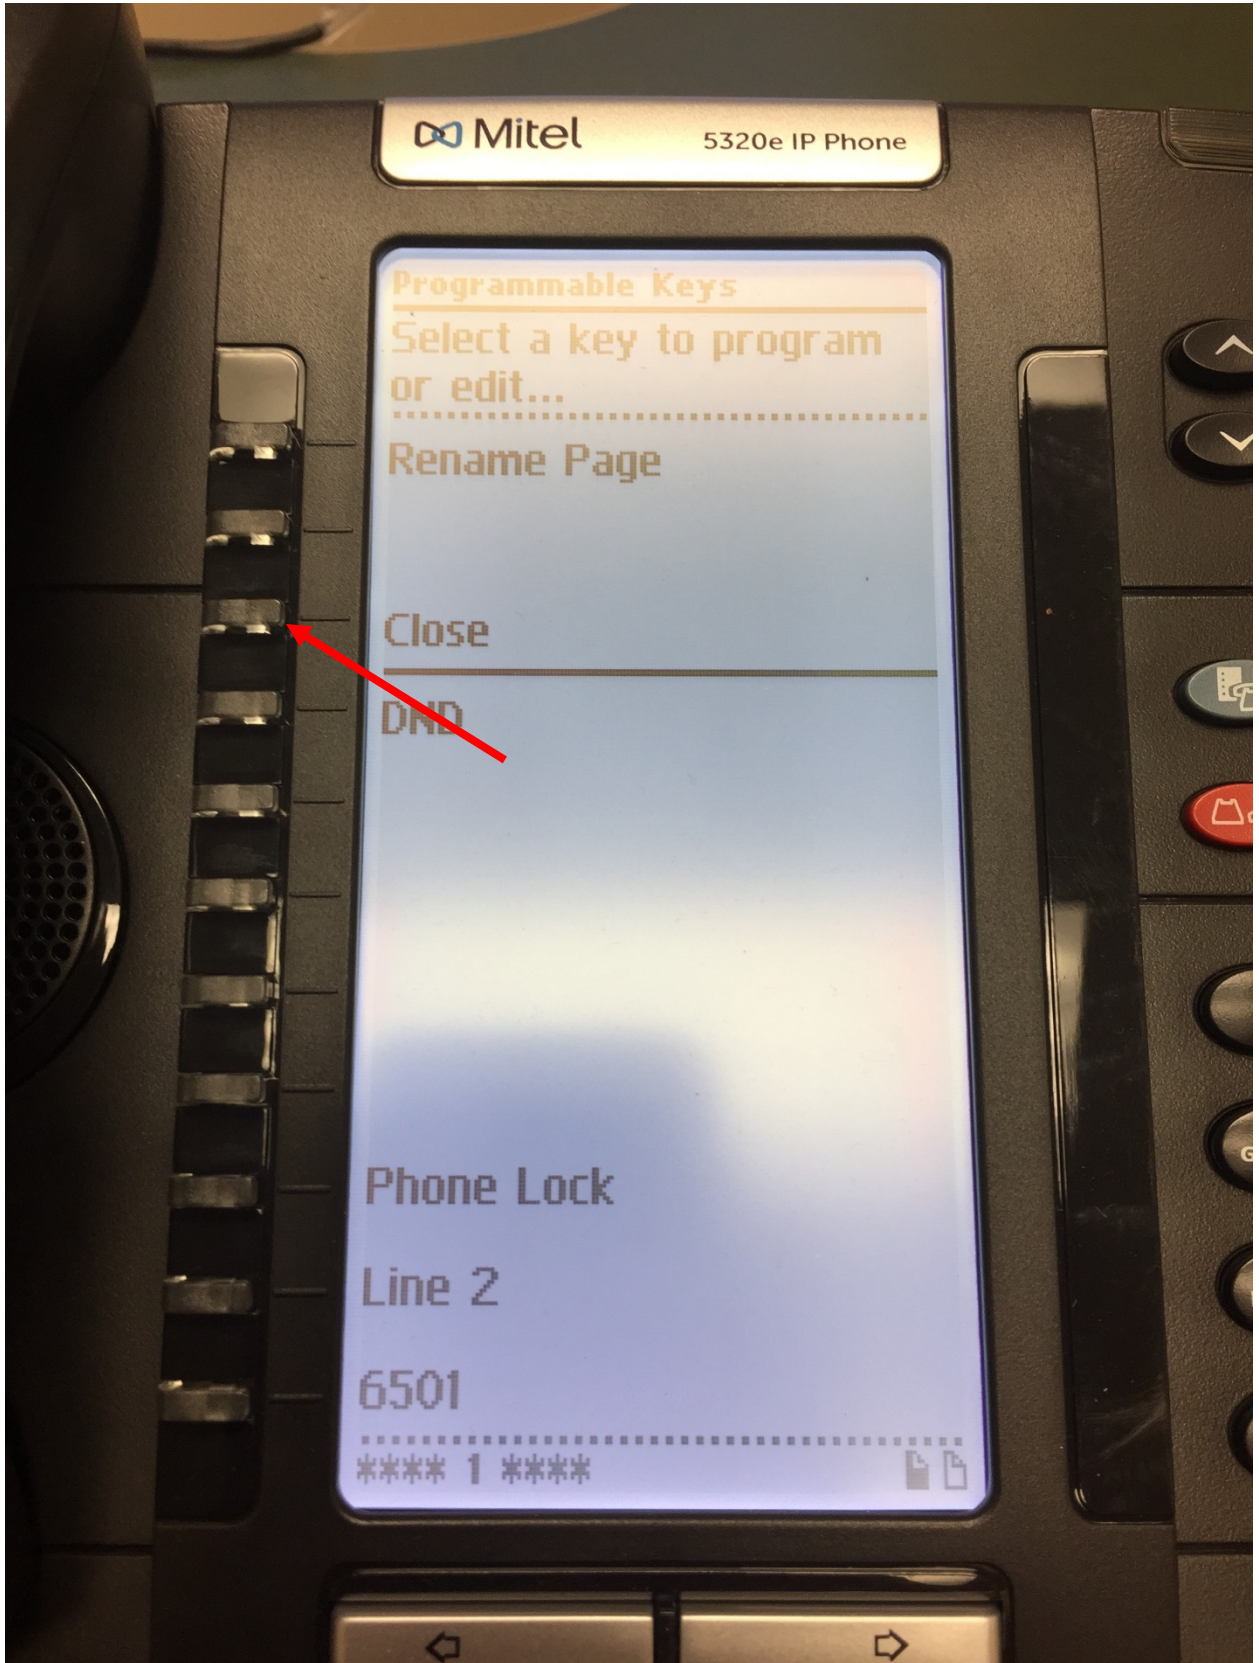

9. Select **Close**.

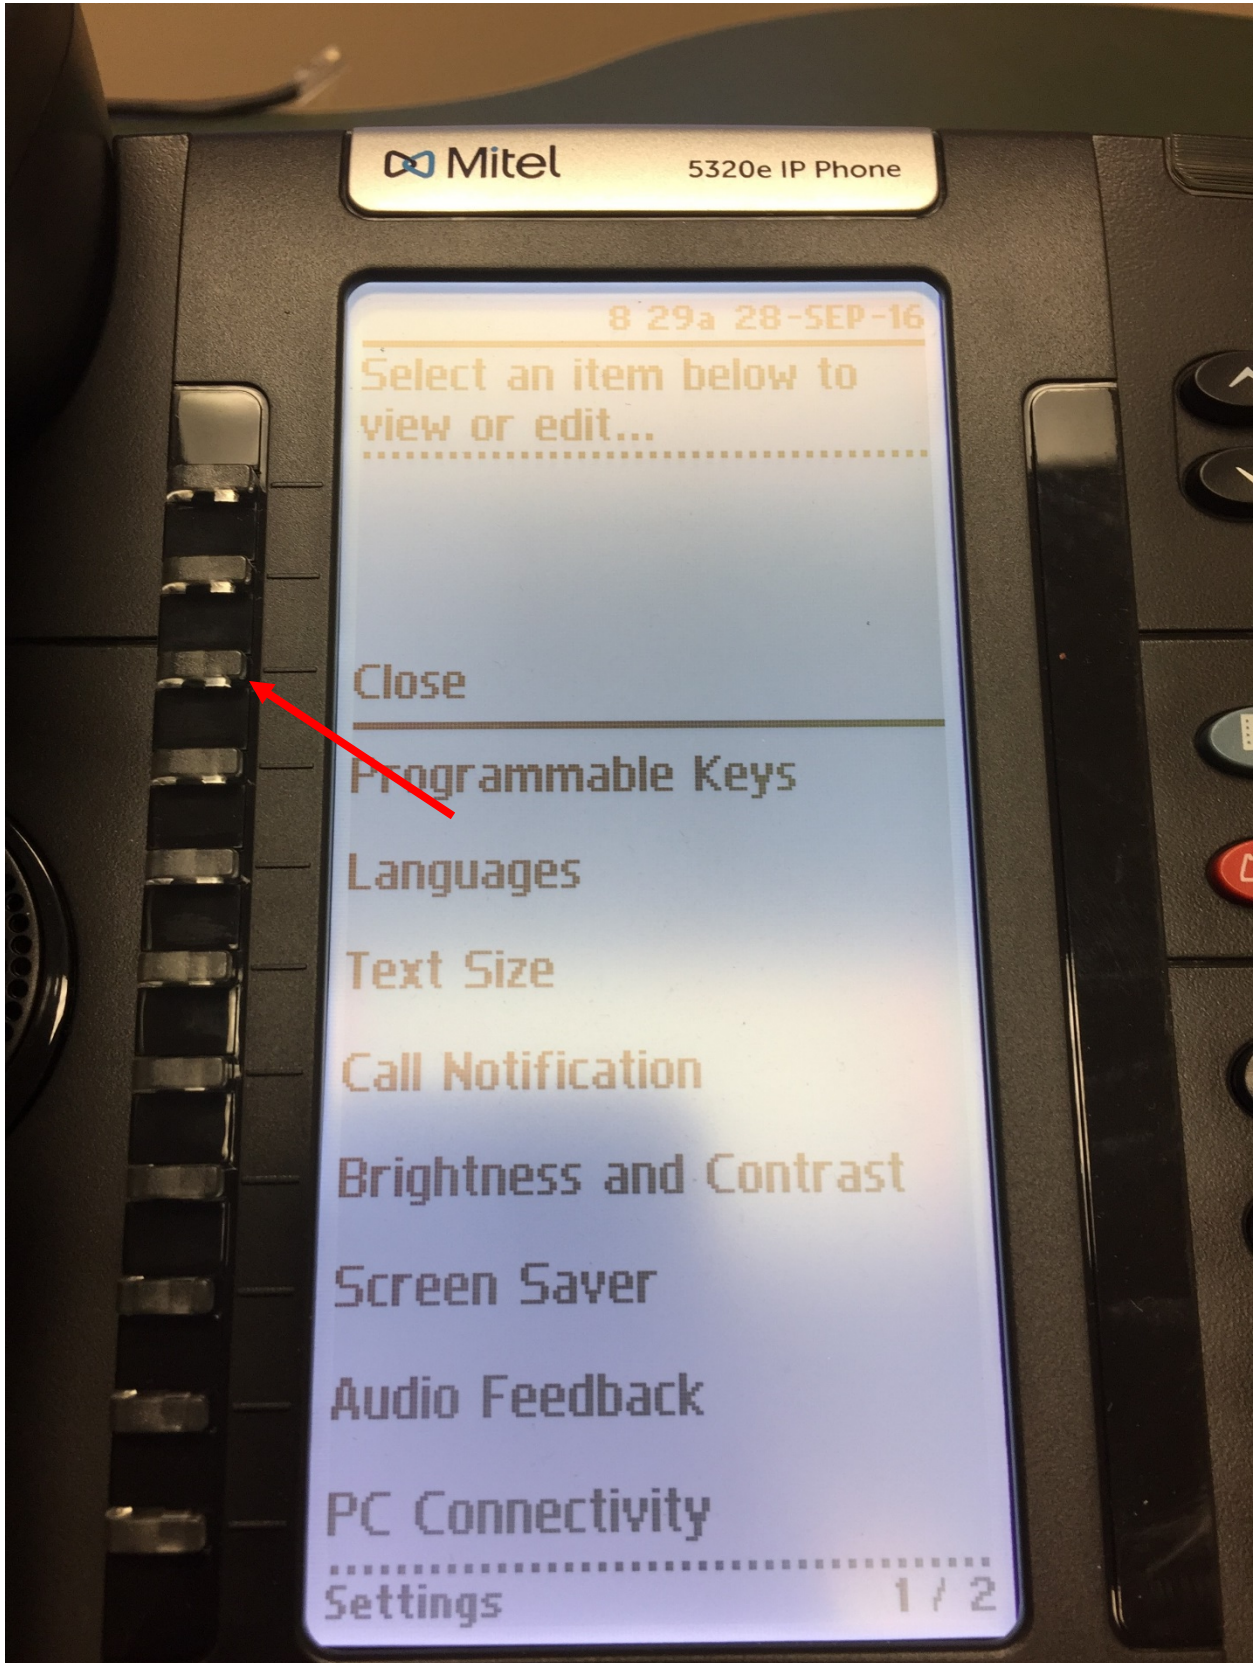


10. Your phone should now display a **Phone Lock** programmed button.

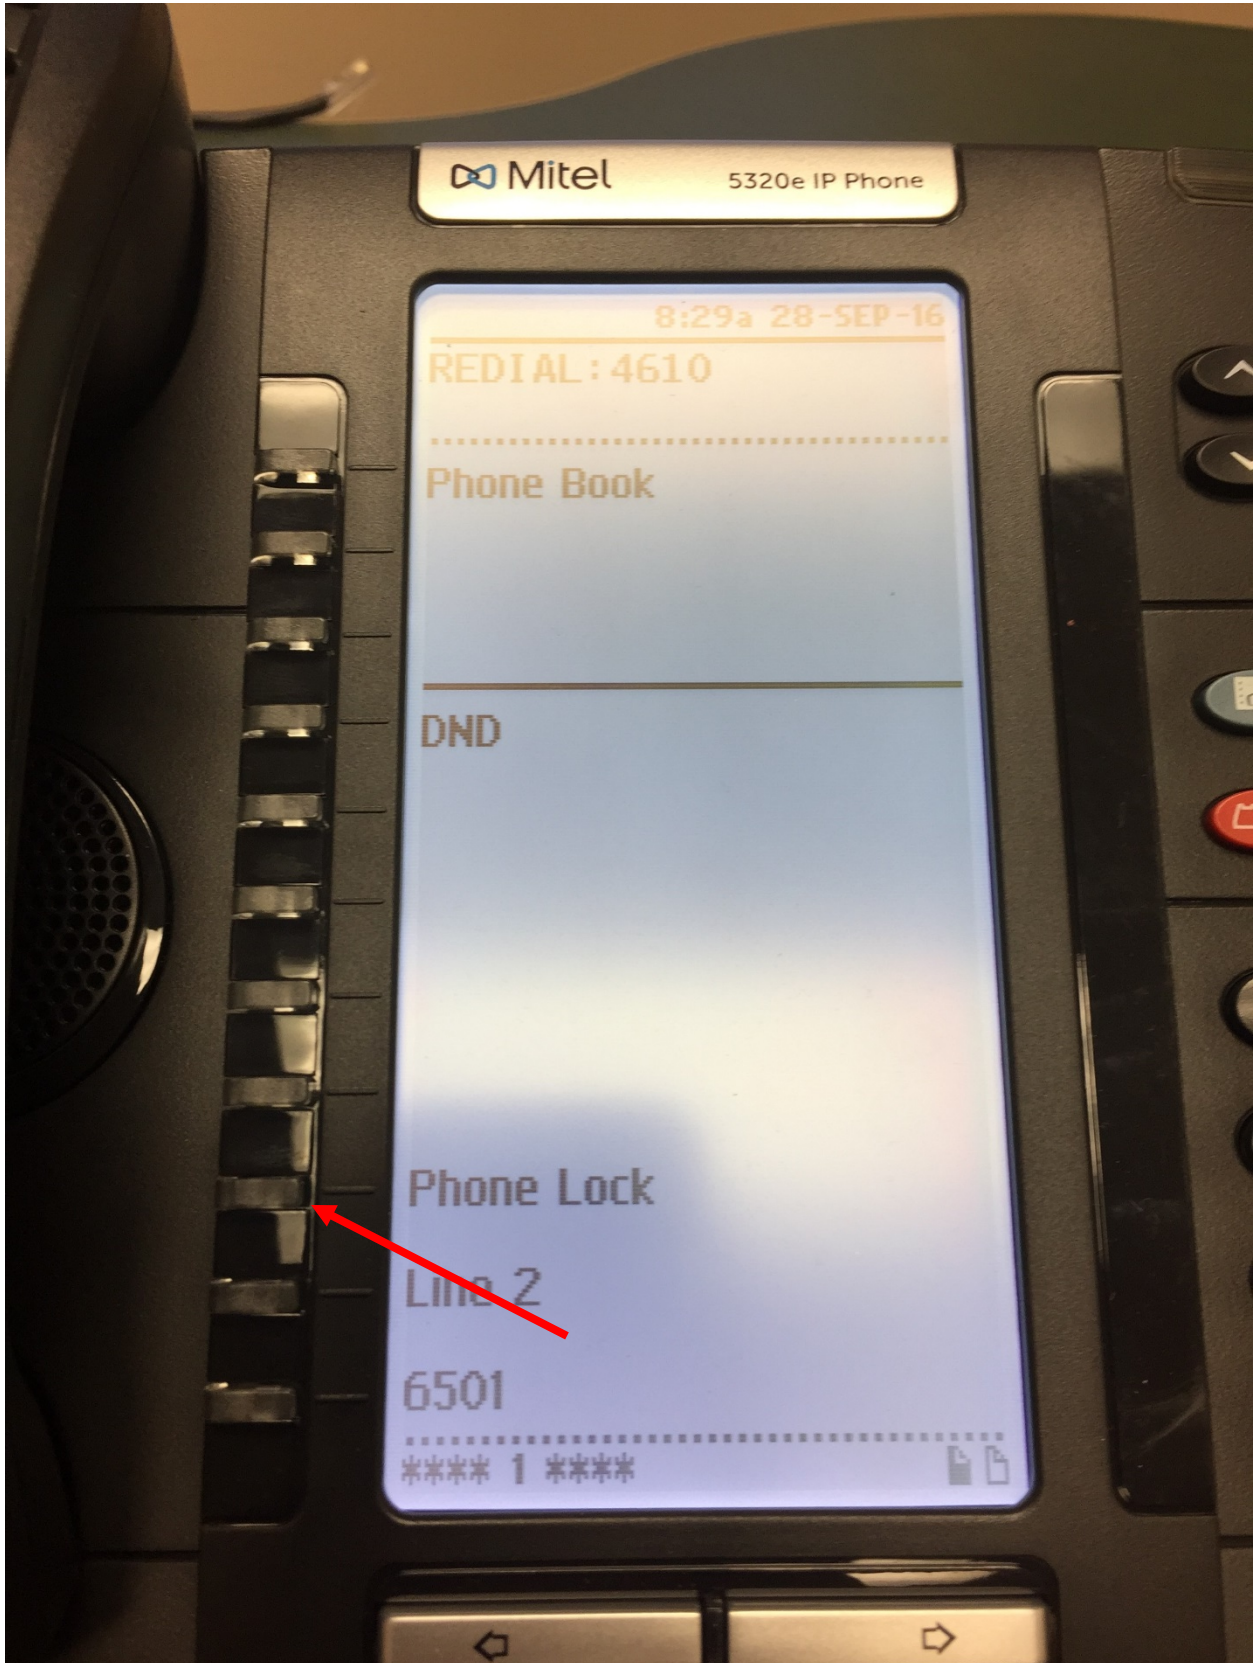


How To Lock Your Phone

1. Press the previously programmed **Phone Lock** button.

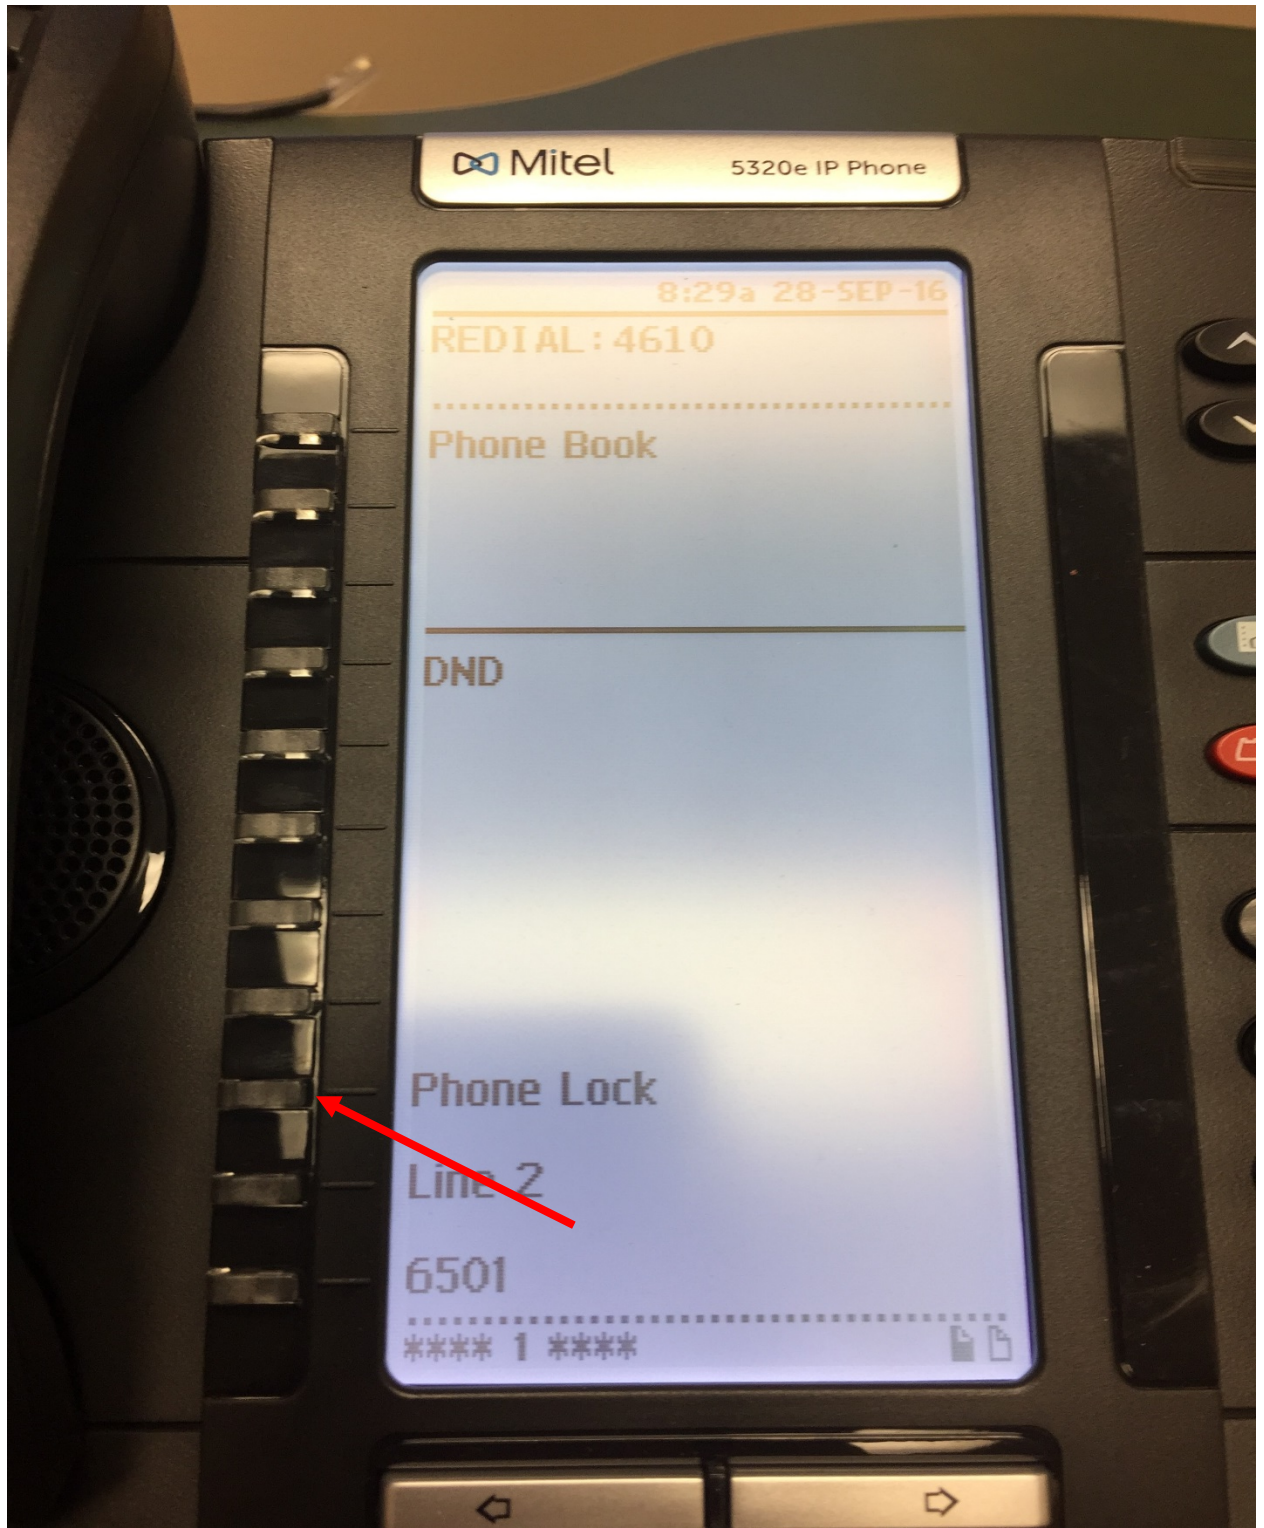


2. Your phone should now display **LOCKED** at the top of the screen and the **Phone Lock** button should be illuminated. All phone features are now LOCKED with the exception of Emergency Calls (911).

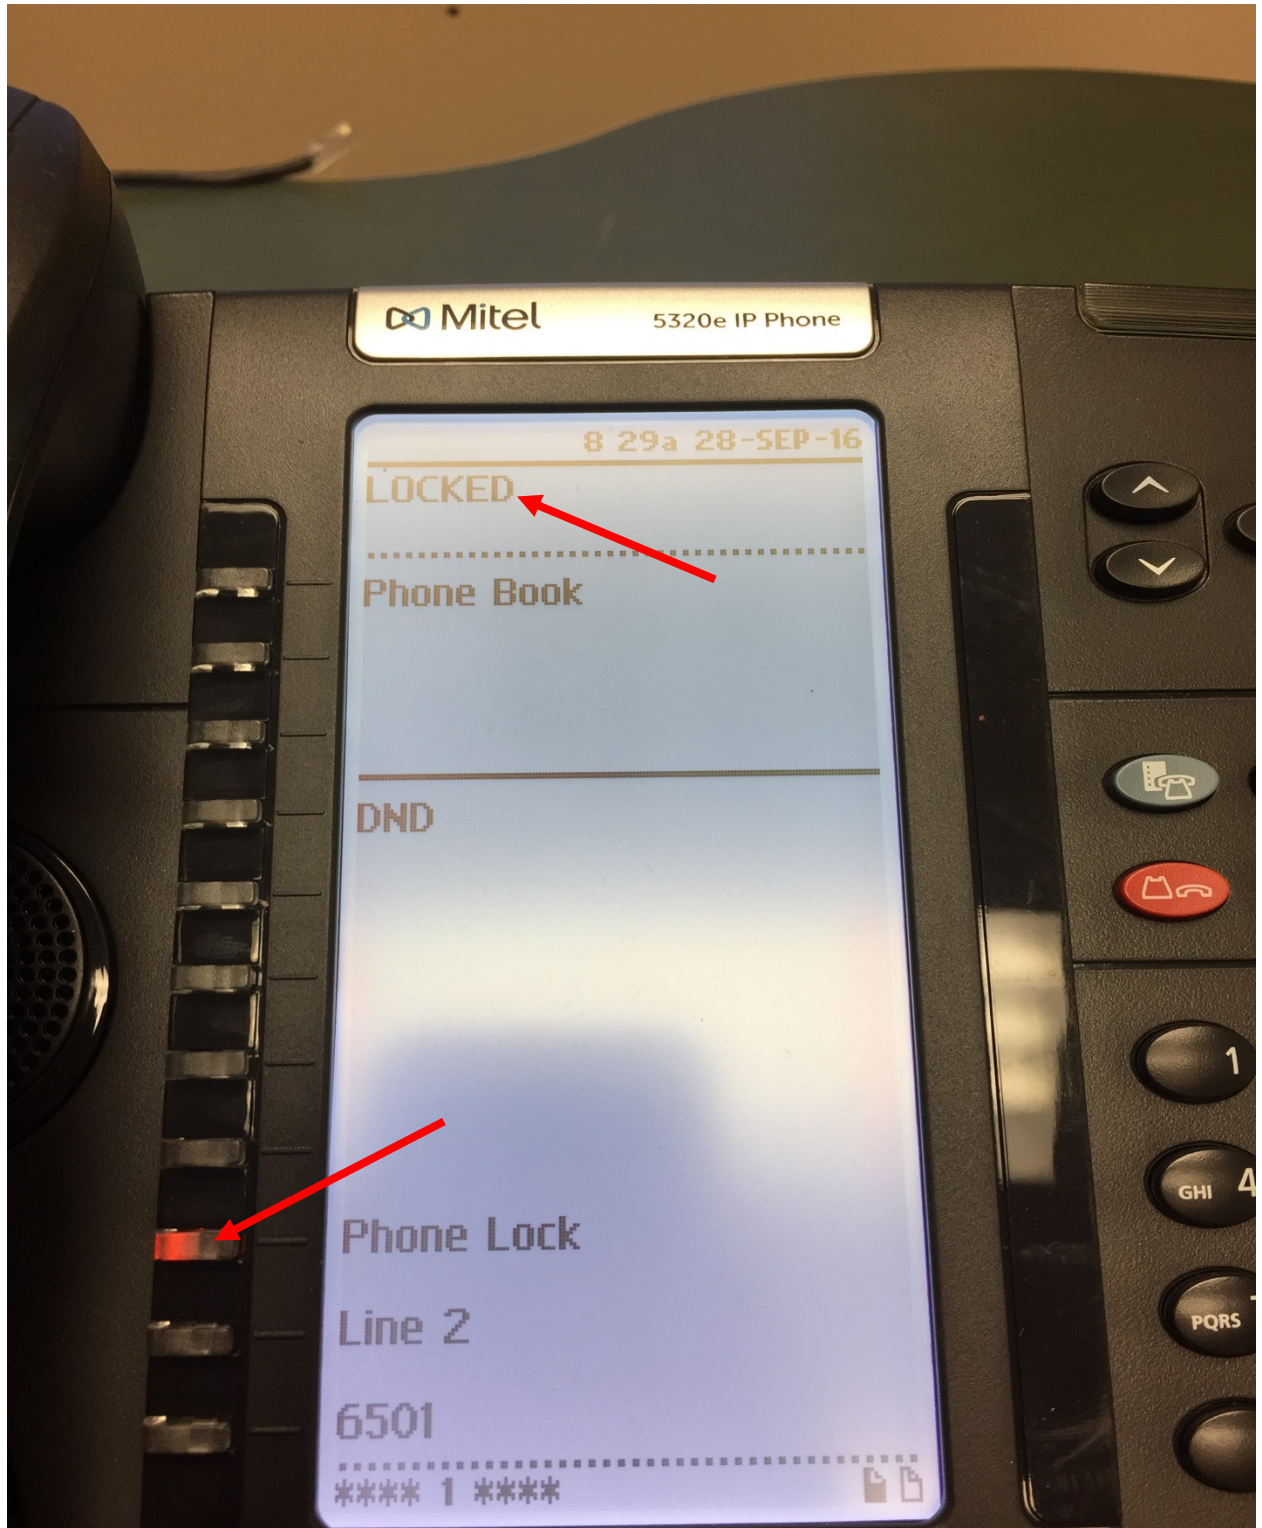


How To Unlock Your Phone


1. Press the illuminated **Phone Lock** button.

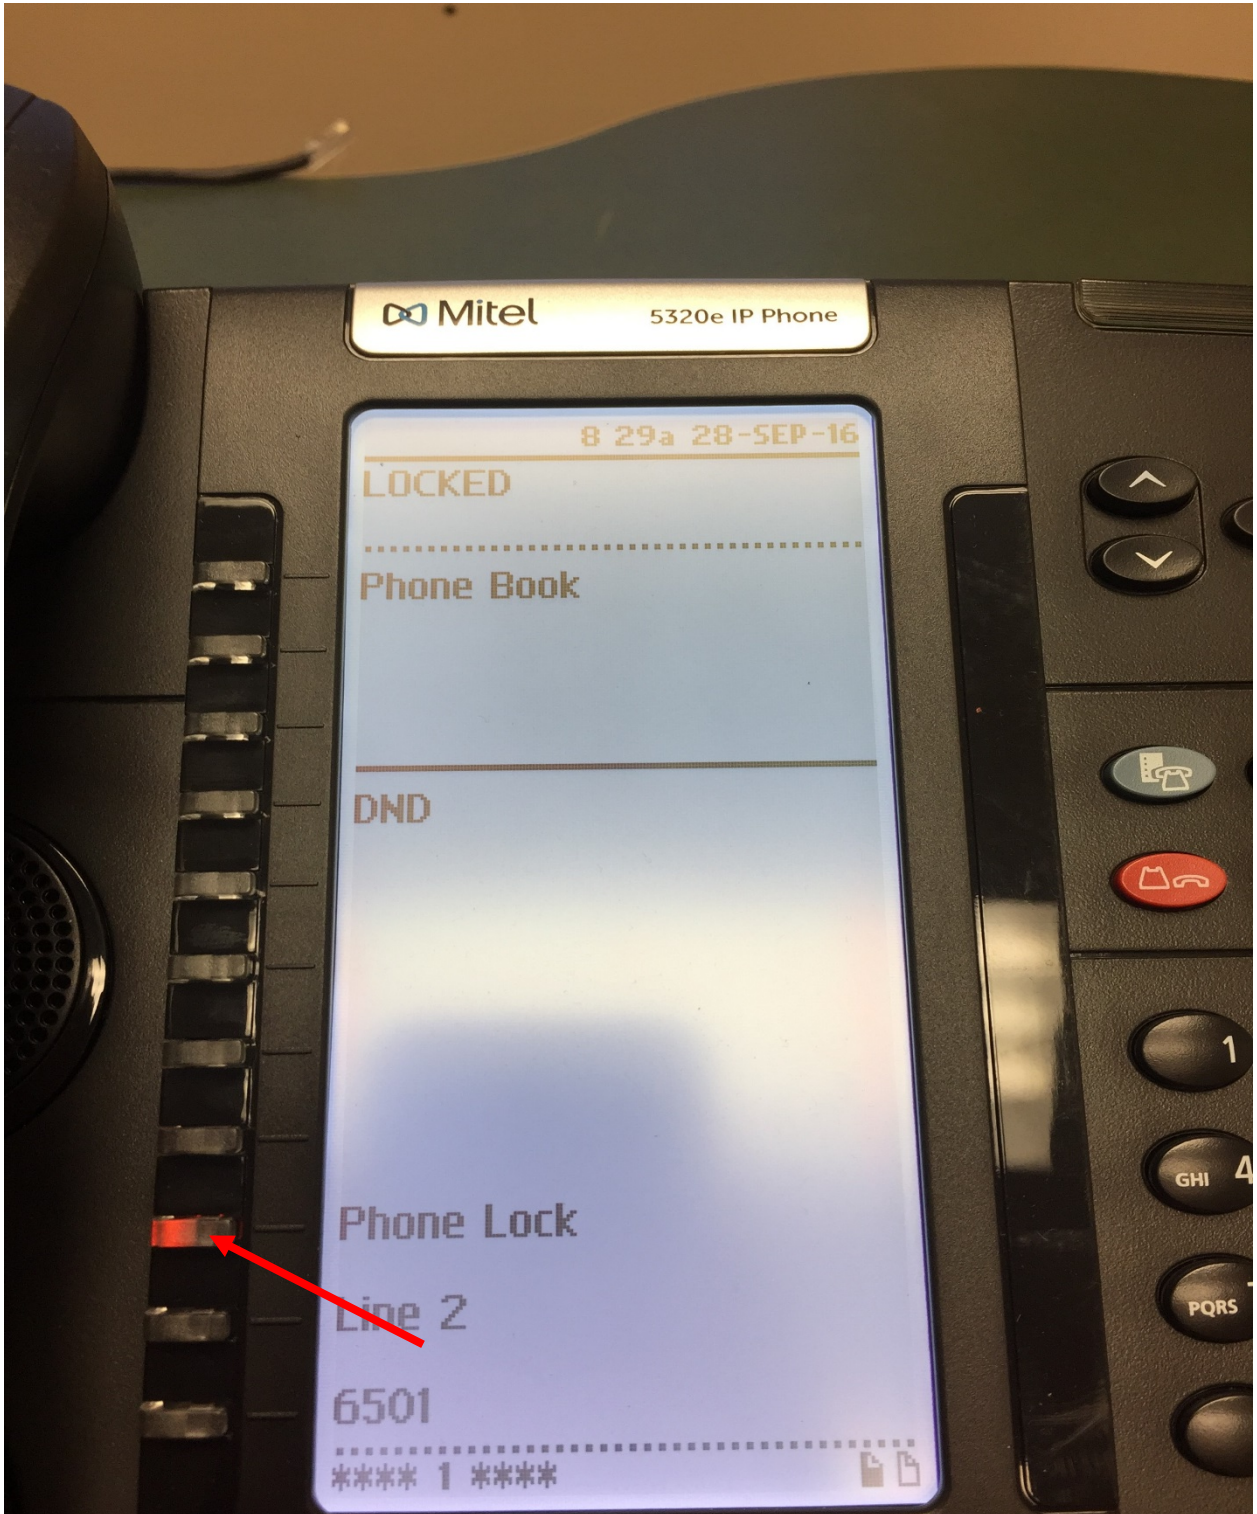

2. Enter your **PIN** using the keypad. (This is the same PIN you use for voicemail)

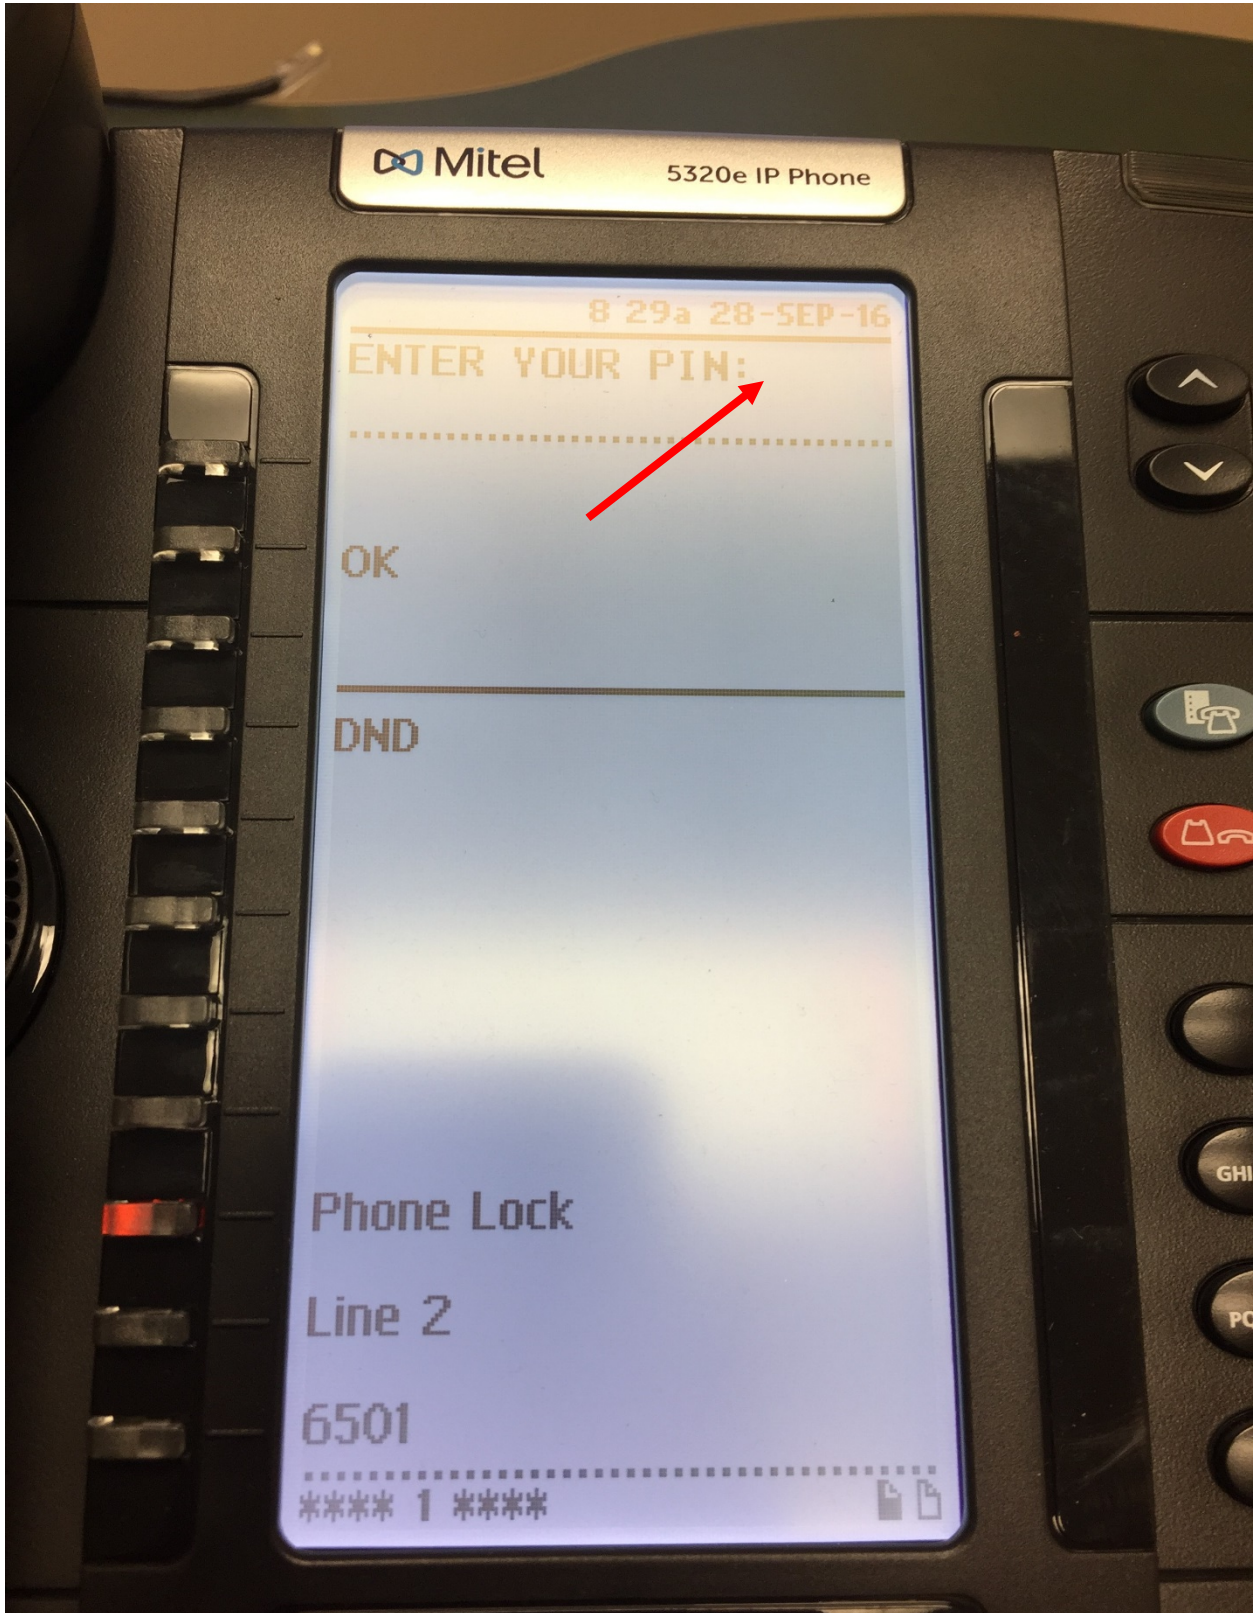

3. Select **OK**.

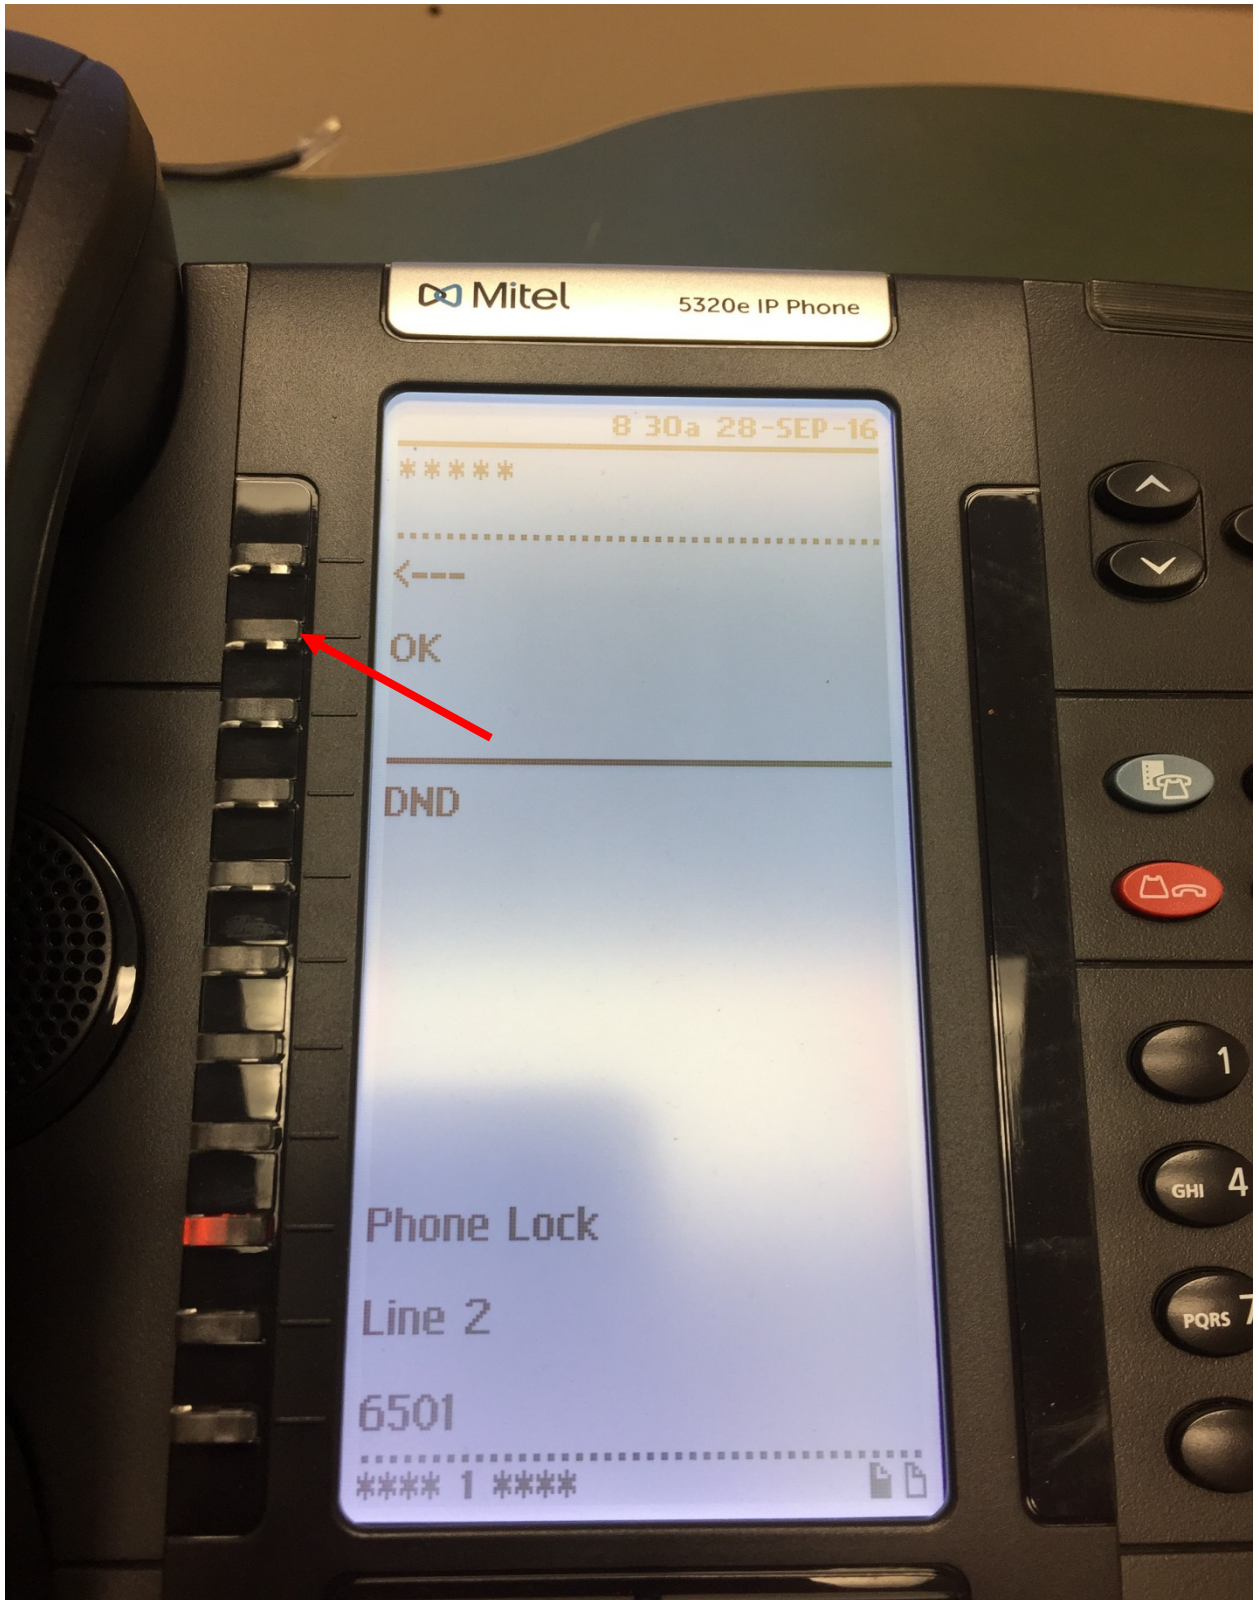

4. The normal home screen should be displayed with all features of the phone now accessible.

